

## Weight-Tare-Piece Counter-Accumulator Indicator

### FEATURES:

- ✓ Accuracy class: III - 6000d concerning EN45501 / OIML R76 (T.C: CEM-CY-05/0422-5.2).
- ✓ Load Cell Input with a 24 bits A/D Sigma-Delta converter.
- ✓ Enhanced protection against EMI (Electromagnetic interferences)
- ✓ 7 Segments Display of 6 Digits (20 mm).
- ✓ 10 Led show the state of the indicator
- ✓ 1 Serial Port RS232C to communicate with PC, Printers or Remote displays.
- ✓ ON / OFF Key on the keyboard.
- ✓ 5 Keys Keyboard to use and program the controller.
- ✓ Electronic and mechanical seal.
- ✓ Standard or configurable ticket through PC Utility.
- ✓ Indicator with mV pre-calibration.
- ✓ Power Supply: 12Vdc / 220Vac.
- ✓ Stainless steel enclosure.
- ✓ DW-PT and DW-PT/X: 210 x 116 x 60mm.
- ✓ DW-PT/P: 214 x 125 x 38mm.
- ✓ DW-PT/B: 225 x 136 x 50mm.



Configuration utility of the weight controller from any PC.

### OPTIONS:


- ✓ One RS485 serial port.
- ✓ 2nd RS232 serial port.
- ✓ Time and date.
- ✓ Wall, column or table mount.
- ✓ IP65 water proof with connectors.
- ✓ External communication options (USB 2.0, WIFI and Ethernet 10 / 100M Base-T communication ports).

### OPERATING MODES:

- ✓ **Weight-Tare:** Allow to display the weight of a scale, apply tares, untare and program fixed tares.
- ✓ **Pieces Counter:** Allow to count pieces.
- ✓ **Accumulator:** Allow to accumulate weights and number of weights.
- ✓ **Transmitter:** Allows to send load cell signals through RS232 or RS485 to any device.

### APPLICATIONS:

- ✓ Simple weight.
- ✓ On-Board weighing of movable equipment.
- ✓ Truck weighing through PC.

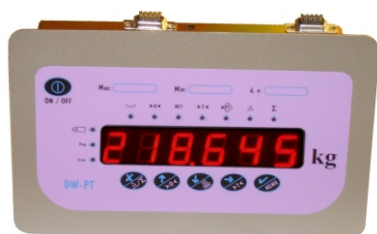

Weighing indicator  
DW-PT/P



Weighing indicator  
DW-PT/B



Weighing indicator  
DW-PT and DW-PT/X

**3 formats available:  
panel, wall and desktop mount**